

1 はじめに

各部の名称と機能

スクロールキー

- メニューをスクロールするときに使用します。
- ブラウザ、電話帳、新規メール作成およびデータフォルダにすばやくアクセスします。

左ソフトボタン

- 画面の操作ガイド部左側の機能を有効にします。
- 待受画面からメインメニューにアクセスします。

TV 電話

- TV電話をかけます。
- 待受画面から「通話履歴」の発信履歴画面にアクセスします。

通話キー

- 電話をかけるときや受けるときに使用します。
- 待受画面から「通話履歴」の発信履歴画面にアクセスします。

クリアキー

文字入力時にカーソルの前にある文字を削除します。

右ソフトボタン

- 画面の操作ガイド部右側の機能を有効にします。
- 待受画面から「ホームページ」にアクセスします。

OK キー

- メニューから選択した機能を決定します。
- 待受画面からメインメニューにアクセスします。

ミュージックキー／マークキー

- 待受画面から「ミュージック」画面にアクセスします。
- オプション項目のチェックボックスを選択します。

電源／終話キー

- 電源のオン／オフや通話を終了するとき、着信拒否をしたいときに使用します。

番号キー

数字や文字を入力するときに使用します。

キー

待受画面で長く押すと、マナーモード設定／解除の切替ができます。



■ 各部の名称と機能

正面と背面



図に示すように
本体は静かに開きます。



注意：閉じる際は本体の上端を指で支えながらゆっくりと閉じてください。その際に指を挟まないようご注意ください。

側面

カメラキー

- 本体を開いて待受画面で長く押すと、カメラが起動します。
- 待受時に本体を閉じた状態で長押しすると、ボイスレコーダの録音を開始します。もう一度押すと録音を停止します。
- 本体を閉じてオーディオプレーヤーを使用中にこのボタンを押すと、本体正面のミュージック操作キーのロック/ロックの解除を行います。
- 待受時に本体を閉じた状態でメールを受信した際、このボタンを軽く押すと新着メール件数をサブディスプレイに表示させます。

外部接続端子

この端子に AC アダプタ、イヤホン変換アダプタ、イヤホンマイク、および USB ケーブルなどを接続します。

**音量キー**

- 本体を開いた状態で、待受画面または通話中に押すと音量を調節することができます。
- オーディオファイル再生中に押すと音量を調節することができます。
- 待受時本体を閉じた状態でメールを受信した際、このボタンを軽く押すと新着メール件数をサブディスプレイに表示させます。(カメラキーと同じ)

ミュージックキー

待受時本体を閉じた際に長く押すと、最近再生したオーディオファイルを起動/終了できます。

**ストラップ
取り付け穴**

ストラップはストラップ取り付け穴に通します。



EM chip の使用方法

EM chip の使用方法

EM chip を取り付ける

- 1 カードスロットの差し込み口にカードを挿入します。このとき、カードの向きが下図と同じになるようにしてください。EM chip の取り付けや取り外しは、電源を切り、電池パックを取り外してから行います。下図に示すようにスライドさせます。



- 2 本体の後部にある電池パックスロットに電池パックを入れます。カチッと音を立てて電池パックが適切な位置に収まるまで電池パックを押し下げます。



- 3 背面カバーをスライドさせて本体に取り付けます。



EM chip を取り外す

必ず本体の電源を切った後で EM chip と電池パックを取り外してください。電源を切らないと、本体が破損する場合があります。

EM chip を取り外すには、次の手順に従います。

- 1 本体から背面カバーを取り外します。



- 2 電池パックを取り出します。



- 3 スロットからスライドさせて取り出します。



電池パックを充電する

電池パックを充電する前の注意事項

電池パックを充電する前に、注意事項をよくお読みください。

注

- 初めて電池パックを充電するときは、最低12時間は充電してください。その後は最大充電時間は2.5時間程度です。
- 電池パック単体では充電できません。必ず本製品に電池パックを取り付けた状態で充電を行ってください。
- 使用していなくても電池パックは放電されます。長期間使用しなかった場合は、充電してから使用するようください。


■ 電池パックを充電する


- 充電時間は周囲温度や電池パックの使用期間によって異なります。
- 利用可能時間は充電／放電の繰り返しにより徐々に短くなります。正しい手順でバッテリーを充電しても、利用可能時間が短くなったら、同じ種類の電池パックに交換してください。
- 電池パックに対して衝撃を与えたり、放り投げたり、乱暴に扱ったりしないでください。液もれ、本体の損傷、過熱、爆発、または発火する可能性があります。
- 本製品に付属の AC アダプタ、もしくは指定の AC アダプタを使用してバッテリーを充電してください。

AC アダプタを使って充電する

AC アダプタを使って電池パックを充電する前に、電池パックが本体に正しく取り付けられていることを確認してください。

電池パックを充電するには、次の手順に従います。

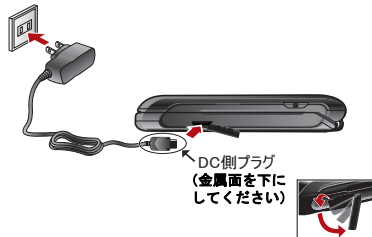

- 1 上の図に示すように、本体の外部接続端子に AC アダプタのコネクタを差し込みます。この際、AC アダプタの DC 側プラグの金属面が下側になっていることを確認してください。
- 2 AC アダプタのプラグを家庭用 AC コンセントに差し込みます。
- 3 電池パックの充電中は、電池残量のアイコン  が点滅し続けます。電池残量のアイコンの点滅が止まったら、電池パックの充電が完了したことを示します。

- 4 充電が完了したら、家庭用 AC コンセントから AC アダプタのプラグを抜き、本体から AC アダプタのコネクタを抜いた後に、キャップを閉じます。

注

- 電源がオフで本機を閉じた状態で充電すると、充電の割合を示す棒状のアイコンが本体外面のサブディスプレイに点滅表示されます。レベルが最大になり、点滅が止まると充電が完了したことを示します。
- 電源オフで本体を開いた状態で充電すると、最初にロゴ画面が表示され、しばらくするとメインディスプレイに筒状の充電アニメーションが表示されます。アニメーションが動かなくなれば充電は完了です。（本体が閉じている場合も、開いている場合も、充電状態の表示はしばらくするとオフになりますが、側面のキーを軽く押すと再表示します。）

- 電源オンで本体を閉じた状態で充電すると、本体外側のサブディスプレイ右上の電池残量マークが点滅します。しばらくすると、サブディスプレイは自動的にオフになります。側面のキーに軽く触れると充電状態を確認することができます。電池残量マークの点滅が止まると充電は完了です。
- AC アダプタは家庭用 AC100-240V の電源に対応しています。
- AC アダプタのプラグは日本国内用です。











待受画面


















待受画面





アイコン	説明
	電波強度を示します。バーの数が多いほど電波が強いことを示しています。
	圏外（電波が届いていない）を示します。
	ローミングサービスを使用しています。

アイコン	説明
	HSDPA ネットワークとデータ通信の両方を利用することができます。
	HSDPA ネットワークでデータ通信中です。
	電話は現在 WCDMA ネットワーク内にあります。
	WCDMA ネットワークとデータ通信の両方を利用することができます。
	WCDMA ネットワークでデータ通信中です。
	電話は現在 GSM サービスエリア内にあります。
	GSM ネットワークと GPRS サービスエリアの両方を利用することができます。
	GPRS サービスエリアでデータ通信中です。
	Bluetooth 機能は有効ですが、他のデバイスが本機を検出することはできません。
	Bluetooth 機能が有効になっていて、他のデバイスが本機を検出することができます。
	Bluetooth でデータ転送をしています。

アイコン	説明
	<ul style="list-style-type: none"> ネットワークに接続している状態を示します。 本機を介して PC がインターネットに接続されています。
	セキュリティで保護されているサイトに接続しています。
	着信中です。
	着信した電話をすべて回線 1 に転送します。
	現在、回線 2 が有効です。
	着信した電話をすべて回線 2 に転送します。
	アラームが有効です。
	microSD カードが挿入されています。
	microSD カードと本機の間でデータが転送されています。
	microSD カードが無効です。

アイコン	説明
	新着 SMS があります。
	新しいプッシュメールがあります。
	新着メールがあります。
	新着留守番メッセージがあります。
	標準モードが有効です。
	マナーモードが有効です。
	サイレントモードが有効です。
	アウトドアモードが有効です。
	ドライブモードが有効です。
	イヤホンモードが有効です。
	オフラインモードが有効です。
	個別モード 1 が有効です。
	個別モード 2 が有効です。
	着信音が鳴動します。
	バイブレーターが有効です。
	ミュートモードが有効です。
	着信音とバイブレーターが有効です。

機能呼び出す


アイコン	説明
	電池残量を示します。目盛りが多いほどバッテリーの残量が多いことを示します。
	電池パックの残量が低下しています。充電してください。

機能呼び出す

メインメニューから機能呼び出す

- 1 待受画面で  を押します。












- 2  で目的の機能を選択し、 を押します。

メインメニューのアイコン

		
エンターテイメント カメラとミュージックアプリケーションを使用します。	ブラウザ モバイルインターネットの使用と設定を行います。	通話履歴 通話履歴を表示します。
		
ミュージック ミュージックとプレイリストアプリケーションを使用します。	メール メールまたはSMSを作成/表示します。	データフォルダ 本体 / microSD カードに保存されているファイルを表示します。
		
ツール アラームやカレンダーを設定します。	電話帳 電話番号やメールアドレスを登録します。	設定 本製品の各種設定をします。

ショートカットキー


お買い上げ時のショートカットキーの役割を以下に示します。

 <p>EMnet の Web サイトにアクセスします。</p>	 <p>通話履歴にアクセスします。</p>	 <p>ミュージックにアクセスします。</p>
 <p>ブラウザにアクセスします。</p>	 <p>電話帳にアクセスします。</p>	 <p>「メール編集」画面にアクセスします。</p>
 <p>データフォルダにアクセスします。</p>	 <p>通話履歴にアクセスします。</p>	 <p>標準モードとマナー</p>


2 基本操作

電源のオン／オフ


電源を入れる

- 1 本体を開きます。
- 2 メインディスプレイにイー・モバイルのロゴマークが表示されるまで、 を押し続けます。

電源を切る




- 1 本体のメインディスプレイが消灯するまで、 を押し続けます。

日付と時刻を設定する


- 1 「メインメニュー」>「設定」>「一般設定」>「日付／時刻設定」を選択します。
- 2 日付と時刻を入力します。(24 時間制)
- 3  を押して保存します。

電話をかける

電話をかける

- 1 電話番号を入力します。
 - キーパッドを使用して電話番号を入力します。
 -  を押して「通話履歴」から番号を選択します。
 - 「電話帳」から電話番号を選択します。詳細な操作方法については、「電話帳」を参照してください。
- 2  を押して電話をかけます。
- 3  を押して通話を終了します。




注

誤った番号を入力した場合は、 を 1 回押してカーソルの左側にある数字を削除します。


電話を受ける

「設定」>「通話設定」>「着信応答設定」により、応答モードを設定できます。「本体オープン」、「エニーキーアンサー」と「通話キー」の三つのモードがあります。

1 電話を受ける方法は次のとおりです。

- 本体オープン：本体を開くことで、電話を受けます。
- エニーキーアンサー：本体を開き、と以外のキーを押すことで電話を受けます。
- 通話キー：本体を開き、を押して電話を受けます。
- イヤホンマイクを接続している場合は、イヤホンマイクキーを押して電話を受けます。

2 電話を切る方法は次のとおりです。

- 本体を閉じる、またはを押して電話を切ります。

- イヤホンマイクを接続している場合は、イヤホンマイクキーを押して電話を切ります。


◆ 自動応答が有効のときに電話を受ける

「設定」>「通話設定」>「自動応答」により、自動応答の応答モードを設定できます。

1 電話を受ける方法は、次のとおりです。

- 即時応答：着信して5秒後、自動的に電話がつながります。
- 定型文：電話着信の20秒後に、相手に設定済みのSMSを送信します。
- 録音メッセージ：着信して20秒後にあらかじめ設定した応答メッセージを流して、相手の伝言を録音します。


2 電話を切る方法は次のとおりです。

- 本体を閉じる、またはを押して電話を切ります。
- イヤホンマイクを接続している場合は、イヤホンマイクキーを押して電話を切ります。

■ マナーモードを有効にする



自局電話番号

お客様の電話番号を確認します。

- 1 「メインメニュー」>「設定」を選択します。
- 2  を押して「通話設定」>「自局電話番号」を選択します。


マナーモードを有効にする

マナーモードが有効な場合、本製品は着信音や警告音を消音またはパイプレータにする状態となります。

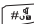
- 1 待受画面で  を2秒以上押す。
 - 待受画面で  の長押しで標準モードとマナーモードを切り替えることができます。


文字の入力

文字入力画面

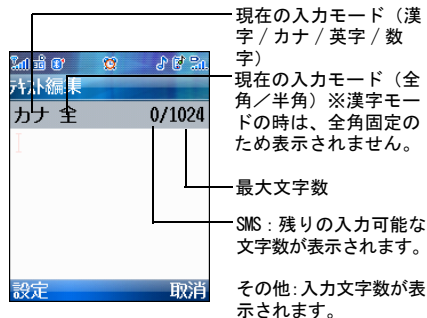



入力モードを切り替える


- 1 文字入力画面で、 を押します。
- 2 「入力モード」を選択します。


3 入力モードを選択して  を押します。

注

- 選択できる入力モードは、文字入力を行う画面により異なります。例えば、Eメールアドレスの入力画面では左ソフトボタンで文字種変更は行えません。
-  を押しても、入力モードを切り替えることができます。
- 全角と半角を切り替えるには「設定」>「全角」／「半角」を選択します。また、漢字入力モード以外では、 を長く押すことで全角と半角を切り替えることができます。


記号／絵文字を入力する

1 文字入力画面で  を押して、記号入力画面を表示します。

- 記号と絵文字を切り替えるには  を押します。

- 「最近入力した絵文字」には、過去に入力した絵文字が表示されます。

2 記号または絵文字を選択します。


3  を押して記号または絵文字入力画面を終了します。

電話帳




- 本製品では、電話帳を本体及び EM chip それぞれ登録することが可能であり、個別に使用することができます。
- 本体の電話帳には連絡先として、電話番号とメールアドレスの登録を 1,000 件まで、保存することができます。
- 頻繁に使用する番号を 8 件まで、短縮ダイヤルに割り当てることができます。

連絡先を作成する





1 「メインメニュー」>「電話帳」を選択します。

2  を押して「本体」を選択します。

電話帳

- 3 「設定」>「新規追加」を選択します。
- 4 編集したい項目で  を押して、情報を入力します。編集が終わったら  を押して保存します。
- 5 基本的な情報を入力したら、 を押して詳細な情報を設定します。
- 6 「設定」>「保存」を選択して保存します。


電話帳を編集する

- 1 「メインメニュー」>「電話帳」を選択します。
- 2  を押して「本体」または「EM chip」を選択します。
- 3 編集する連絡先を検索して  を押します。
- 4 編集する項目を選択してから  押すか、「設定」>「編集」を選択して、編集を開始します。新しい情報を入力したら、 を押して編集を終了します。

- 5 「設定」>「保存」を選択して、編集した電話帳を保存します。

通話履歴を使って電話帳を作成する


通話履歴にある電話番号を、新規もしくは既存の電話帳に登録します。

- 1 「メインメニュー」>「通話履歴」を選択します。
- 2  を押して通話記録を選択します。
- 3 「設定」>「番号保存」を選択します。
 - 本体に保存：電話の連絡先登録を選択し、他の情報を入力してから、「設定」>「保存」を選択します。
 - EM chip に保存：EM chip の連絡先登録を選択し、他の情報を入力してから、「設定」>「保存」を選択します。
 - 既存のアイテムに追加：登録済みの連絡先に対して、電話番号を追加してから、「設定」>「保存」を選択します。

注

既存のアイテムに追加する際に、既に連絡先に登録されている番号の場合は、既に登録されている電話番号を書き換えるかどうかを確認するメッセージが表示されます。


電話帳の検索

- 1 「メインメニュー」>「電話帳」を選択します。
- 2  を押して「本体」または「EM chip」を選択します。
- 3 「設定」>「検索」を選択します。
- 4 検索する電話帳の読みを入力するか、最初の文字を入力することで、該当する電話帳が表示されます。


注

検索を開始した画面が、「本体」「EM chip」のどちらであっても、検索結果は両方の電話帳で一致した内容が表示されます。

電話をかける

- 1 「メインメニュー」>「電話帳」を選択します。
- 2  を押して「本体」または「EM chip」を選択します。
- 3 電話帳を選択して「設定」>「発信」>「電話発信」または「TV電話」を選択して、電話をかけることができます。また、「発信前編集」を選択して電話をかける前に番号を編集することもできます。

メールを作成する

- 1 「メインメニュー」>「電話帳」を選択します。
- 2  を押して「本体」または「EM chip」を選択します。

メール

- 3 電話帳を選択して「設定」>「メッセージの作成」を選択します。次に、「メール」または「SMS」を選択して、メッセージを作成します。ただし、選択した電話帳にメールアドレスが存在しない場合は、メールを作成することはできません。




メール


メールまたは SMS を利用して、メッセージを送受信できます。

項目	説明
メール	メールでは、メール機能に対応したイー・モバイル携帯電話もしくは他社の携帯電話やパソコンとの間で、文字や画像、ミュージックなどのデータを送受信できます。
SMS	SMS では、SMS に対応するイー・モバイル携帯電話同士でメッセージを送受信できます。

メールの作成と送信







アイコン	説明
	宛先のメールアドレス
	CC 送信するメールアドレス
	BCC 送信するメールアドレス
	メールの件名
	メールの内容

- 1 「メインメニュー」>「メール」>「新規メール作成」を選択します。
- 2 「メール編集」画面で、「宛先」、「Cc」、および「Bcc」のアドレスを入力します。(→P19)
- 3 「件名」を選択して件名を入力し、 を押しします。
- 4 「内容」を選択して、本文および添付ファイルを編集します。(→P20)
- 5 「メール編集」画面に戻り、「設定」を選択します。
 - 送信：メールを送信します。
 - 下書きフォルダに保存：メールを「下書き」フォルダに保存します。
 - テンプレートに追加：メールをテンプレートとして「テンプレート」フォルダに保存します。
 - 送信設定：メールの送信に関する設定を変更します。
 - サイズ：現在のメールのサイズを表示します。

◆ 宛先リストの編集

宛先、Cc、および Bcc のメールアドレスを追加します。Bcc のアドレスは、受信者側には表示されません。



- 1 「メール編集」画面で、「宛先」、「Cc」、または「Bcc」を選択して  を押しします。
- 2 宛先のアドレスを入力します。
 - 宛先リストで  を押してメールアドレスを直接入力します。
 - 宛先リストから、「設定」>「電話帳参照」>を選択して連絡先を検索します。(→P17)
 を押して連絡先を選択します。
 - 宛先リストから、「設定」>「グループ参照」を選択します。 を押してグループを選択します。
- 3 「戻る」を選択すると「メール編集」画面に戻ります。







■ メール

注

- 「電話帳参照」で連絡先を検索する際は、メールアドレスが登録されているすべての連絡先情報を検索できます。
- 「グループ参照」で連絡先を追加する際に、連絡先にメールアドレスが登録されていないと、その連絡先は宛先のアドレスに追加できません。
- 「宛先」、「Cc」および「Bcc」画面で「設定」を選択し、「宛先に設定」、「Cc に設定」または「Bcc に設定」を選択すると、選択したアドレスの送信設定を変更できます。
- 「宛先」、「Cc」および「Bcc」画面で「設定」を選択し、「削除」または「全て削除」を選択すると、1つまたは全てのメールアドレスを削除できます。

◆ メールの編集

- 1 「メール編集」画面で、「内容」を選択して  を押します。
- 2  を選択してメール本文を編集します。

- 3  を選択して「データフォルダ」の画像ファイルまたは動画を選択できます。
- 4  を選択して「データフォルダ」の音楽ファイルを選択できます。
- 5 複数のページがある場合は  を選択し、 を押してページを切り替えます。
 - 新しいページを追加するには、「メール編集」画面で「設定」>「ページ挿入」を選択します。
- 6  を選択し、 を押して現在のページの再生時間を調整します。
 - メールを確認するには、「設定」>「プレビュー」を選択します。
- 7 「戻る」を選択します。

注




- 同一ページ内に添付できるのは動画ファイルか音声ファイルのどちらかのみです。同時に両方は添付できません。

- ファイル形式やサイズによっては、添付できない場合があります。
- 著作権の設定されているファイルは送信できません。



メールの受信

メールを受信すると、通知メッセージが表示されます。メールを受信すると、本機には次のように表示されます。




- 1 通知メッセージが表示されている時に、 を押してメールの「受信箱」を開きます。
- 2  を押して表示するメールを選択し、 を押します。

メールの返信

- 1 「メールフォルダ」の「受信箱」で、 を押してメールを選択します
- 2 「設定」>「メールで返信」または「SMS で返信」を選択します。
- 3 「メール編集」画面でメールを編集し、 を押します。

SMS

SMS の作成と送信

- 1 「メインメニュー」>「メール」>「新規 SMS 作成」を選択します。
- 2 「SMS 編集」画面で、本文を入力します。
- 3 SMS を編集した後に、 を押して「番号編集」画面を開きます。
 - 電話番号を入力します。

SMS

- 「設定」>「電話帳」を選択して「検索」画面を開き、選択します。複数選択する場合は繰り返しします。
- グループを選択するには「設定」>「グループ」を選択します。

4 「番号編集」画面で、 を押すか、「設定」>「送信」を選択します。



- SMS を保存するには「設定」>「保存」を選択します。

SMS を受信する


SMS を受信すると、SMS 通知メッセージが最初に表示されます。

SMS を受信すると、次のように表示されます。




- 1 SMS通知メッセージが表示されている時に、 を押してSMSの「受信箱」を開きます。
- 2 表示されたSMSを選択し、 を押します。

注




- 本体（「受信箱」、「下書き」および「送信済み」）に保存できるSMSは合計500件です。
- 「SMSフォルダ」の空き容量がないときに新しいSMSが着信すると、 が点滅し、通知ダイアログボックスが表示されます。この場合は、不要なメールを削除する必要があります。

SMS を返信する




- 1 SMS の「受信箱」で、 を押して SMS を選択します。
- 2 「設定」 > 「返信」を選択します。
- 3 「SMS 編集」画面で SMS を編集します。

ブラウザ

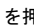EMnet




- 1 「メインメニュー」 > 「ブラウザ」を選択します。
- 2  を押して「EMnet」を選択し、予め設定されたウェブページへアクセスします。
- 3  を押してリンクを選択し  を押してアクセスします。
- 4 ウェブページ閲覧中に、「設定」を選択して各種操作を実行できます。

URL 直接入力

- 1 「メインメニュー」 > 「ブラウザ」を選択します。
- 2  を押して「URL 直接入力」を選択し、 を押します。
- 3 URL を入力します。
- 4  を押して URL にアクセスします。


データフォルダ

ファイルの表示

- 1 メインメニューから「データフォルダ」を選択します。
- 2  を押してファイルが保存されている場所を選択します。
- 3  を押してファイルを選択し、次に  を押して表示します。

■ 本体表示言語を英語に設定する

本体表示言語を英語に設定する

- 1 「メインメニュー」>「設定」>「一般設定」>「Phone language」を選択します。
- 2  を押して「English」を選択します。

主な仕様

H11HW

項目	仕様
サイズ (W × H × D)	「折りたたみ時のサイズ」 約 49.5mm x 97.8mm x 17.5mm
重量	約 105g (電池パックを含む)
連続待受時間	約 380 時間
連続通話時間	約 190 分
充電時間	約 2.5 時間

注 連続待受時間、連続通話時間は使用環境、電波状況などにより変動します。

電池パック

項目	仕様
電圧	3.7V
電池パック	リチウムイオン
容量	850mAh

項目	仕様
サイズ (W × H × D)	約 44.5mm x 37.8mm x 5.7mm

AC アダプタ

項目	仕様
電源	AC 100V ~ 240V
入力電流	最大 0.2A
出力電圧/電流	5.0V/650mA
サイズ (W × H × D)	約 59.6mm × 61mm × 28mm
コードの長さ	約 180cm

1 Getting to Know Your Phone

Your Phone

Scroll key

- Press this key to scroll through a menu.
- To quick access Browser, Contacts, Edit MMS and My Files.

Left function key

- To activate the function indicated at the left of the prompt bar on the screen.
- To access the main menu in standby mode.

V-P calls

- To make a video call.
- To access the **Call Log** screen in the standby mode.

Send key

- To make or answer a call.
- To access the **Call Log** screen in the standby mode.


Clear key

To delete a character before the cursor in the editing mode.






Your Phone

Front View and Back View

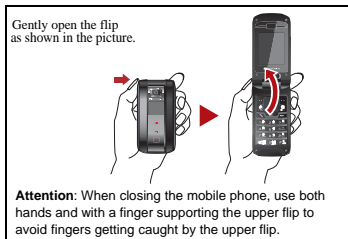

Side View

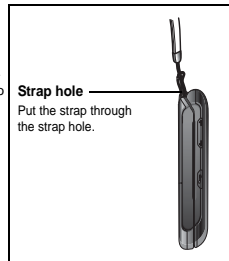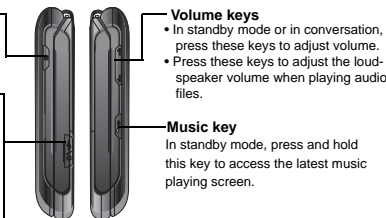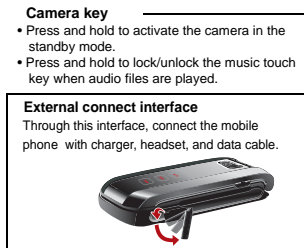

How to Use the EM chip

Loading the EM chip

- 1 Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the bottom right. Then slide in as shown.



- 2 Fit the battery into the battery slot on back of the phone. Press the battery down until it clicks into place.



- 3 Slide the back cover to the phone.



Unloading the EM chip

Only unload the EM chip and the battery after powering off your phone. Otherwise, your phone may be damaged.

To unload the EM chip, do as follows:

- 1 Unload the back cover out of the phone.



Charging the Battery

- 2 Take out the battery.



- 3 Press the EM chip with one finger and slide it out of the slot.



Charging the Battery

Before Charging the Battery

Before charging the battery, read the precautions carefully.


Note

- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- The battery discharges even while not being used. If you haven't used it for a long time, please recharge it first.
- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.
- Do not strike, toss or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- Charge the battery by using the charger supplied with your phone.

Charging with a Cable Charger

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, do as follows:

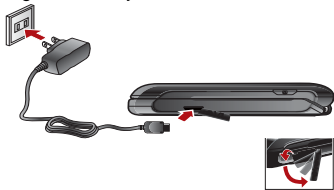

- 1 Insert the plug of the charger into the connector of the phone as shown in the preceding figure. Before inserting the plug, ensure that the arrow on the charger output jack points to the front side of the phone.
- 2 Plug in the connector of the charger to a power socket.
- 3 When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.

- 4 After being charged, unplug the power adapter from the power socket, unplug the charger from the mobile phone, and then close the protection cover.

Note

- During charging with power is off and the flip closed, a cylinder icon indicating the power level of the battery will appear on the screen and will blink, continuously. When the cylinder is filled and stops blinking, it indicates that the charging is completed.
- When charging the mobile phone with it closed and is powered on, the battery icon is blinking on the upper right corner of the external display. After a while, the external display is automatically off. You can check the charging status by softly touching a side key. When the battery icon stops blinking, the charging is complete.











Home Screen

















Home Screen









Icon	Description
	Indicates signal strength. The more the vertical bars appear, the stronger the signal is.
	No network signal.
	You are using the roaming service.

Icon	Description
	Both HSDPA networks and data services are available.
	Performing data services in HADPS network.
	The phone is currently in a WCDMA network.
	Both WCDMA networks and data services are available.
	Performing data services in WCDMA network.
	The phone is currently in a GSM network.
	Both GSM and GPRS networks are available.
	Performing data services in GPRS network.

Icon	Description
	The Bluetooth function is enabled but the mobile phone cannot be discovered by other devices.
	The Bluetooth function is enabled and the mobile phone can be discovered by other devices.
	Performing Bluetooth transmitting.
	<ul style="list-style-type: none"> Indicates network connection state. Your PC connects to the Internet through your phone.
	Indicates security connection state of the network.
	The phone is in a call.
	Forwarding all incoming voice calls to line 1.
	Call line 2 is enabled currently.
	Forwarding all incoming voice calls to line 2.
	Alarm clock is enabled.


Icon	Description
	SD card is inserted.
	SD card is transferring data to the phone.
	SD card is invalid.
	You have new text messages.
	You have new PUSH messages.
	You have new multimedia messages.
	You have new voice mail.
	The Normal profile is activated.
	The Meeting profile is activated.
	The Silent profile is activated.
	The Activity profile is activated.
	The Car profile is activated.
	The Headset profile is activated.
	The Offline profile is activated.
	The My profile1 profile is activated.
	The My profile2 profile is activated.

■ Accessing the function screen


Icon	Description
	Ringtone is enabled.
	Vibration is enabled.
	Mute mode is enabled.
	Ringtone and vibration are enabled.
	Indicates battery power level. The more the bars, the higher the battery power level.
	Low battery.










Accessing the function screen

Accessing the Function Screen Through the Main Menu

- 1 In home screen, press .












- 2 Select the function and press  to access.

Main Menu Icons & Meaning		
		
Entertainment Use Camera & Music Applications	Browser Mobile Internet Use & Settings	Call Log Use Call Log Application
		
Music Use Music & Playlist Applications	Messaging Create/view MMS or SMS...	My Files Open files saved on phone/micro card
		
Organiser & Tools Set Alarm or Calendar entries...	Contacts Save entries to call or send message...	Settings Adjust/customize phone settings

Accessing the Function Screen Through the Shortcut Keys


The description about default short-cut keys in standby screen is as follows:

Main Menu Icons & Meaning		
		
Access the EMnet website.	Access Call Log.	Access Music.
		
Access Browser.	Access Contacts.	Access the Edit MMS screen.
		
Access My Files.	Access Call Log.	Switch between the Normal and Meeting profiles.

2 Basic Operations

Powering On/Off


Powering On

- 1 Gently open the flip.
- 2 Press and hold  until the mobile phone is powered on.

Powering Off




- 1 Press and hold  until the mobile phone is powered off.


Setting the date and time

- 1 Select **Settings > Phone settings > Date and time**.
- 2 Enter the date and time.(24-hour format)
- 3 Press  to save.

Calls





Making a Voice Call

- 1 Enter a phone number.
 - Enter a phone number through the keypad in the home screen.
 - Press , and choose a number from **Call Log**.
 - Select a number in **Contacts**.
- 2 Press  to dial out.
- 3 Press  to end the call.

Note To delete a wrong number, press  once to delete the digit to the left of the cursor.

Answering a voice call

You can set the answer mode. Select **Settings > Call settings > Answer mode**, and then select **Open flip, Any key** or **Send key**.


- 1 Answer a call:
 - Open flip: You can answer a call when you open the flip.
 - Any key: Open the flip, press any key except  and  to answer a call.
 - Send key: Open the flip, press  to answer a call.
 - If the headset is plugged in, press the headset key to answer a call.
- 2 End a call:
 - Close the flip or press  to end a call.
 - If the headset is plugged in, press the headset key to end a call.

You can set the auto answer mode to **select Settings > Call settings > Auto answer**.

- Immediate answer: Your mobile phone answers the call after 5 seconds alerting automatically.
- Message: Your mobile phone sends the predefined SMS to the calling party after 20 seconds alerting.
- Recorded message: The mobile phone plays the 10 seconds record after 20 seconds alerting, and then records the calling party's message.

My number


Your mobile phone automatically displays your number from the EM chip.

- 1 Select **Settings > Call settings > My number**.
- 2 Into the My number screen, press  to view the selected number.

Turn meeting profile on


Turn meeting profile on

When meeting profile is active all mobile phone sounds are muted and mobile phone vibrates for incoming calls.

- 1 Press and hold  to the meeting profile from the current profile.


Text Input


MMS Text Input Interface

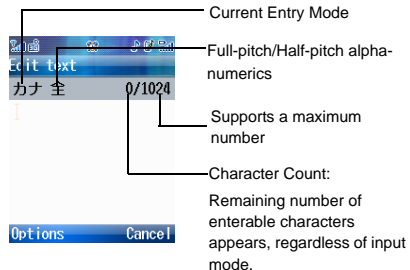



Switching Input Modes

Text entry modes may be limited in some text entry fields or windows.



- 1 In a text entry window, press .
- 2 Select **Input mode**.


- 3 Select an input mode and press .

Note

- Press  to switch between input methods, including Kanji, Kana, Abc, ABC, abc, and numbers.
- To switch between full pitch and half pitch, select **Options > Full Pitch/Half Pitch**. Except the Kanji input mode, you can press and hold  to switch between full pitch and half pitch.

Symbols/Pictogram




- 1 In a text entry window, press  to display symbols.
- Press  to switch between symbols and pictograms.
 - The selected symbols and pictographs are displayed in the history view.
- 2 Select **symbols** or **pictographs**.

- 3 Press  to exit from the symbols or pictographs window.


Contacts

You can save phone numbers, and Email addresses for up to 1,000 entries in contacts of the phone; EM chip contacts capacity varies with cards. You can also assign eight frequently-used numbers to speed dialing keys.

Creating Contacts





- 1 Select **Contacts** in the main menu.
- 2 Press  to select **Phone** or **EM chip**.
- 3 Select **Options > New**.
- 4 Select a field, press  to edit the field, enter the information as required, and then press  to save it.

Contacts

- After entering basic information, press  to set advanced information when you create a contact in your phone.

- 5 Select **Options** > **Save** to save it.


Editing Contacts

- 1 Select **Contacts** in the main menu.
- 2 Press  to select **Phone** or **EM chip**.
- 3 Search the contact and press .
- 4 Select the field and press  to be edited. Enter new information and press  to save it.
- 5 Select **Options** > **Save** to save the edited contact.

Creating a Contact Through Call Logs

Save phone numbers from **Call Log** to new or existing Contact entries.

- 1 Select **Call Log** in the main menu.

- 2 Press  to select a record.

- 3 Select **Options** > **Save number**.

- Save to phone: Select a phone contact entry, enter other information.
- Save to EM chip: Select a EM chip contact entry, enter other information.
- Append to existing: Search the number and select the number.


- 4 Select **Options** > **Save**.

Note

If the contact entry is already saved, you are notified whether to replace the current number.


Finding a Contact

- 1 Select **Contacts** in the main menu.


- 2 Press  to select **Phone** or **EM chip**.
- 3 Select **Options > Search**.
- 4 Enter the contact name reading or enter the first letter of contact name you are searching for. The contact will be displayed.

Note The search result will include all matched contacts from both the phone and EM chip memories, no matter from which screen (**Phone** or **EM chip**) you start searching.

Making a Call

- 1 Select **Contacts** in the main menu.
- 2 Press  to select **Phone** or **EM chip**.
- 3 Select a contact and select **Options > Call**. Then, you can select **Voice call** or **Video call** to make a call. Alternatively, you can select **Edit before call** to edit the number before making the call.

Creating a Message

- 1 Select **Contacts** in the main menu.
- 2 Press  to select **Phone** or **EM chip**.
- 3 Select a contact and select **Options > Create message**. Then, you can select **MMS** or **SMS** to create a message. If the current contact does not have an Email address, you cannot create a MMS.

Multimedia Message






Send messages via MMS or SMS.


Item	Description
MMS	Through MMS, you can send data such as text, image, and music between two handsets that support the MMS function.
SMS	Through SMS, you can send text messages.

Multimedia Message

Sending a MMS






Icon	Description
	Email address of the MMS recipient
	Email address of the MMS that copies to
	Email address of the MMS that blind copies to
	Subject of the MMS
	Content of the MMS

- 1 Select **Messaging** > **Write MMS** in the main menu.
- 2 In Edit MMS, enter the addresses of **To**, **Cc**, and **Bcc**. (→ P17)
- 3 Select **Subject** to enter text as subject, and then press .
- 4 Select **Content** to edit the pages. (→ P17)
- 5 Return to the Edit MMS screen, and select **Options**
 - Send: To send the multimedia message.
 - Save to drafts: Save the MMS to Drafts folder.
 - Add to template: Save the MMS as a template to Templates folder.
 - Send setting: To set parameters relates to sending multimedia messages.
 - Size: View the size the current MMS

◆ Editing Recipient List




Add Email addresses of **To**, **Cc**, and **Bcc**. The bcc address cannot be viewed by others.

- 1 In Edit MMS, select **To**, **Cc**, or **Bcc**, and then press .
- 2 Enter addresses of recipients.
 - Select an entry from the recipients list, and then press  to enter an Email address.
 - Select a position from the recipients list, and then select **Options** > **Contact** to search a contact. Search a contact in this screen (→ P14). Press  to select the contact.
 - Select a position from the recipients list, and then select **Options** > **Group**. Select the group to be added.
- 3 Select **Back** to return to the Edit MMS screen.






Note

- When searching contacts through **Contacts**, you can search all contacts information contains Email address.
- When adding contacts through **Group**, if the contact does not have Email address, the contact cannot be added to the recipient's address.
- The adding addresses of contacts contains **Recipients**, **Cc**, and **Bcc** screens, select **Options**, and then you can select **Set To**, **Set Cc**, **Set Bcc** to change the sending mode of the selected address.

◆ Editing a MMS

- 1 In Edit MMS, select **Content**, and then press .
- 2 Select  to access the text entry field, and then edit text.
- 3 Select  to enter the image-editing field and then you can select images or video files in **My Files**.

Multimedia Message

- 4 Select  to enter the music-editing field and then you can select audio files in **My Files**.
- 5 Access the field indicated by  and press  to select one from different pages if there are more pages.
 - To add a new page, select **Options > Insert page** in Edit MMS.
- 6 Access the field indicated by  and press  to adjust the playing time of the current page.
 - Select **Options > Perview** to preview the MMS.
- 7 Select **Back**.




Note

- If the video file is chosen in the image-editing field, you cannot edit the music-editing field any more.
- Some files may not be attached depending on the file format or size.
- Some copyrighted files may not be sent.

Receiving a MMS


When a MMS is received, the mobile phone displays as follows:



- 1 In this information window, press  to access the **Inbox** of MMS.
- 2 Press  to select the MMS to be viewed, and then press .


Replying a MMS


- 1 In **Inbox** of MMS, press  to select the MMS.
- 2 Select **Options > Reply MMS** or **Reply SMS**.

- 3 Press  to access the Edit MMS screen to edit the MMS.
- 4 Select **Options > Send**.

SMS


Creating and sending a SMS




- 1 Select **Messaging > Write SMS** in the main menu.
- 2 In the Edit SMS screen, enter a message.
- 3 After editing the message, press  to access the Edit numbers screen.
 - Enter a phone number.
 - Select **Options > Contacts** to access the Search screen, and then select one or multiple phone numbers. (→ P14)
 - Select **Options > Group** to select a group.

- 4 In the Edit SMS screen, press  or select **Options > Send**.
 - Select **Options > Save** to save the message.

Receiving a SMS

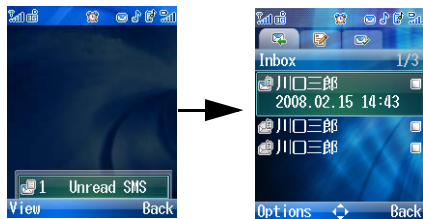
When a SMS is received, the mobile phone displays as follows:





- 1 In this information window, press  to access the **Inbox** of SMS
- 2 Press  to select a SMS to be viewed, and then press .

Browser

Note

When the Inbox is full and a new SMS is received, the  starts blinking and a prompt dialog box is displayed. You need to delete some messages to receive the new message.




Replying a SMS

- 1 In **Inbox** in SMS, press  to select the SMS.
- 2 Select **Options > Reply**.
- 3 Press  to access the Edit SMS screen to edit the SMS.
- 4 Select **Options > Send**.




Browser

Browsing EMnet

- 1 Select **Browser** in the main menu.





- 2 Press  to select **EMnet** to access pre-defined webpages.
- 3 Press  to select a highlighted connection, and then press  to access.
- 4 When browsing web pages, you can select **Options** to perform operations.

Entering Web Address



- 1 Select **Browser** in main menu.
- 2 Press  to select **Enter URL**, and then press .
- 3 Enter the web address.
- 4 Press  to access the web address.

My Files

Viewing files

- 1 Select **My Files** in the main menu.
- 2 Press  to select the saving location of the folder, and then press  to access.
- 3 Press  to select a file, and then press  to view.

English Display

- 1 Select **設定 > 一般設定 > Phone language**.
- 2 Press  to select **English**.
- 3 Press  to save.

Specifications

H11HW

Item	Specification
Dimensions (W × H × D)	Approx.(Closed). 49.5 mm × 97.8 mm × 17.5 mm
Weight	Approx. 105 g (including the battery)
Continuous standby time	Approx. 380 hours
Continuous talk time	Approx. 190 minutes
Charge time	Approx. 2.5 hours

Note The standby time and talk time may vary by environment.

Battery

Item	Specification
Voltage	3.7 V
Battery	Li-ion

Item	Specification
Capacity	850 mAh
Dimensions (W × H × D)	Approx. 44.5 mm × 37.8 mm × 5.7 mm

AC Charger

Item	Specification
Power Source	AC 100 V-240 V
Input Current	0.2A MAX
Output Voltage/ Current	5.0 V / 650 mA
Dimensions (W × H × D)	Approx. 59.6 mm × 61 mm × 28 mm
Cord Length	Approx. 180 cm